

PIR SENSOR GZ-RT26


Product Features

Infrared Motion Sensor Switch


Hole: 10mm cut out




Product Wiring Diagram

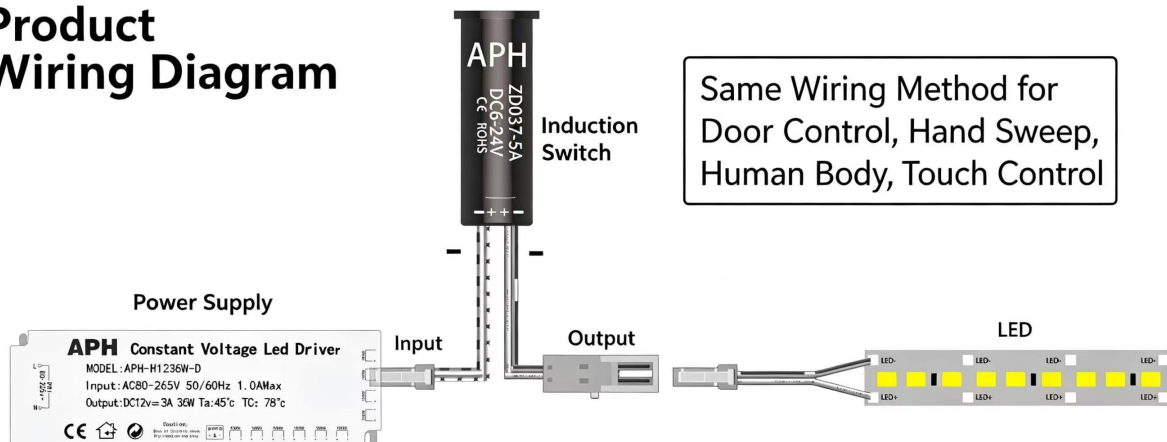


Connect Transformer

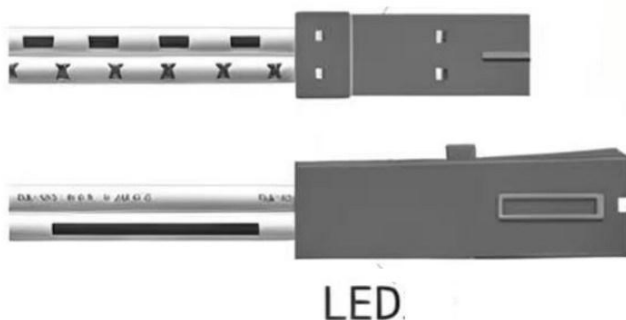


Wire Input/Output + - Pole Instructions

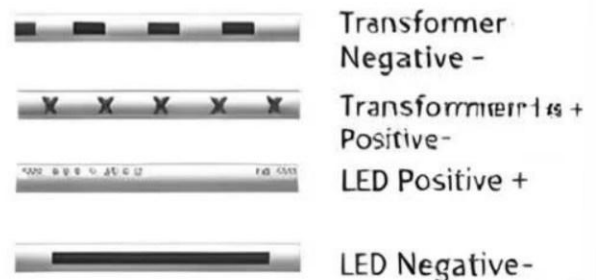

External Installation Instructions

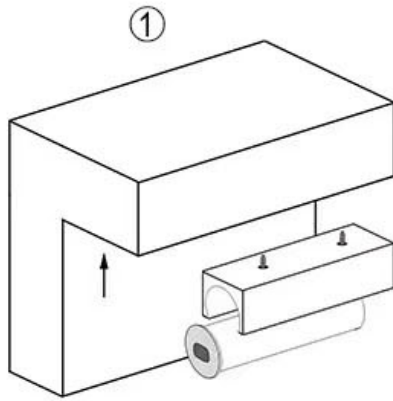


① Using the self-tapping screws from the accessory kit, first secure the square mounting bracket to the installation location.

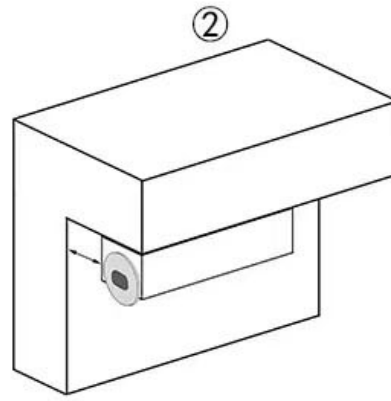


② Press the cylinder into the mounting bracket, taking care to align it as parallel as possible with the edge of the board.

Flush mounting

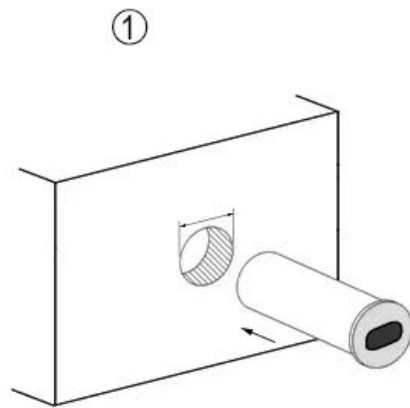

① Drill a counterbore in the shelf according to the ordered product dimensions.
Hole size: $\phi 12\text{mm}$

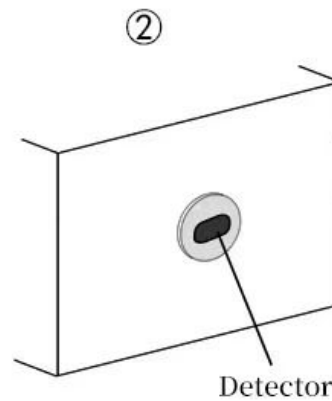

② Gently press the cylindrical unit into the mounting position, ensuring it sits parallel; do not pull forcefully on the lead wires.

Connection and Usage Demonstration

